

AIRPORT DIAGRAM

BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)
AL-804 (FAA) BALTIMORE, MARYLAND

ATIS
115.1 127.8
BALTIMORE TOWER
119.4 257.8
GND CON
121.9
CLNC DEL
118.05


D

324 Δ

39°12'N

- RWY 04-22
PCN 65 F/A/W/T
S-100, D-220, 2D-500, 2D/2D2-728
- RWY 10-28
PCN 110 F/A/W/T
S-100, D-220, 2D-500, 2D/2D2-790
- RWY 15L-33R
PCN 26 F/A/W/T
S-30, D-60
- RWY 15R-33L
PCN 100 F/A/W/T
S-100, D-220, 2D-500, 2D/2D2-790

 
JANUARY 2010
ANNUAL RATE OF CHANGE
0.0° W



AIR CARGO
GENERAL AVIATION PARKING

NE-3, 03 MAY 2012 to 31 MAY 2012

NE-3, 03 MAY 2012 to 31 MAY 2012

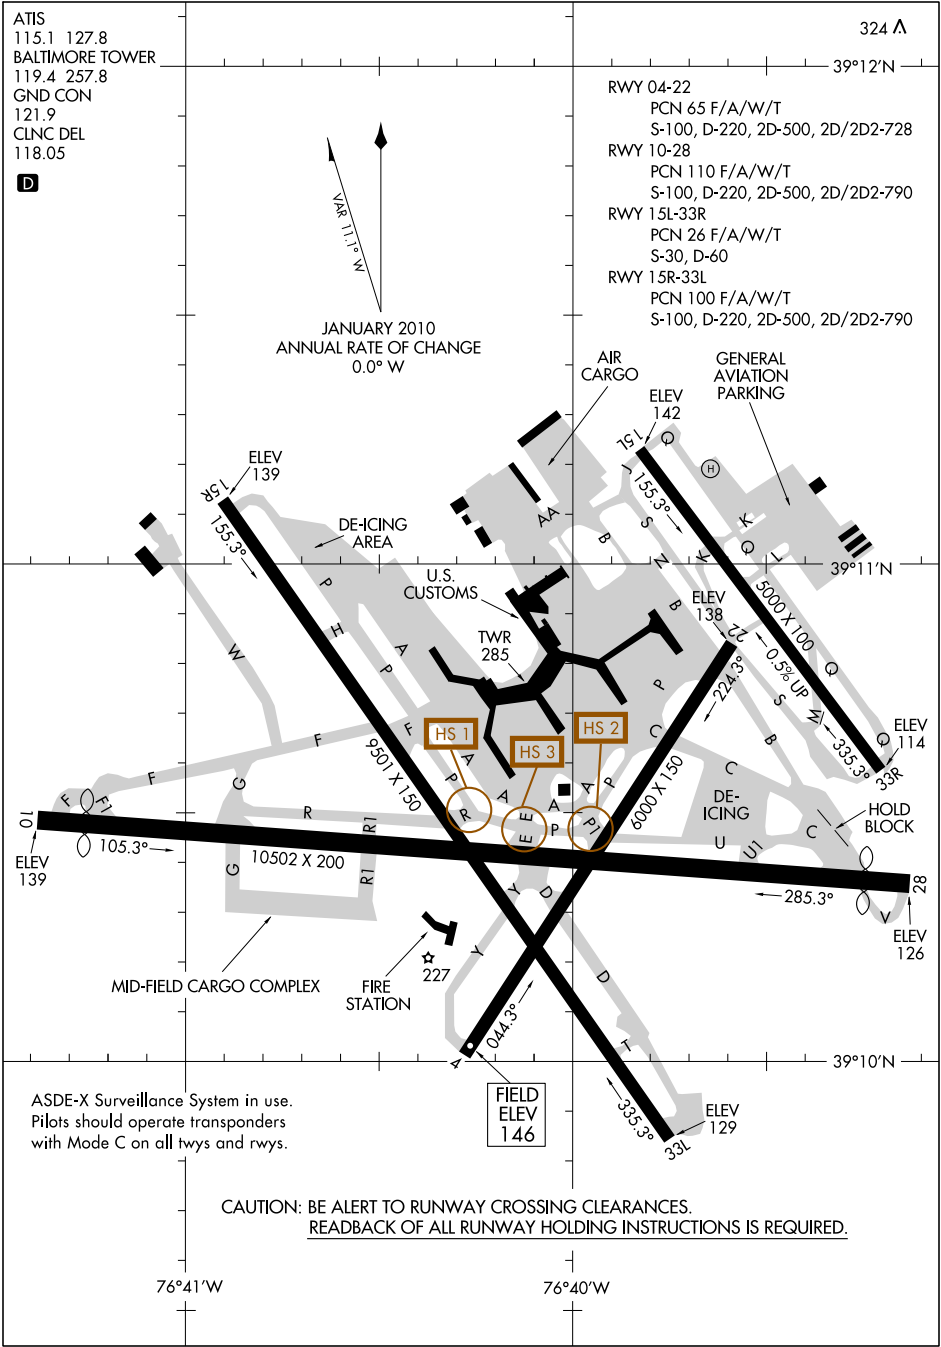

ASDE-X Surveillance System in use.
Pilots should operate transponders
with Mode C on all twys and rwys.

**CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.**

AIRPORT DIAGRAM

BALTIMORE, MARYLAND
BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)