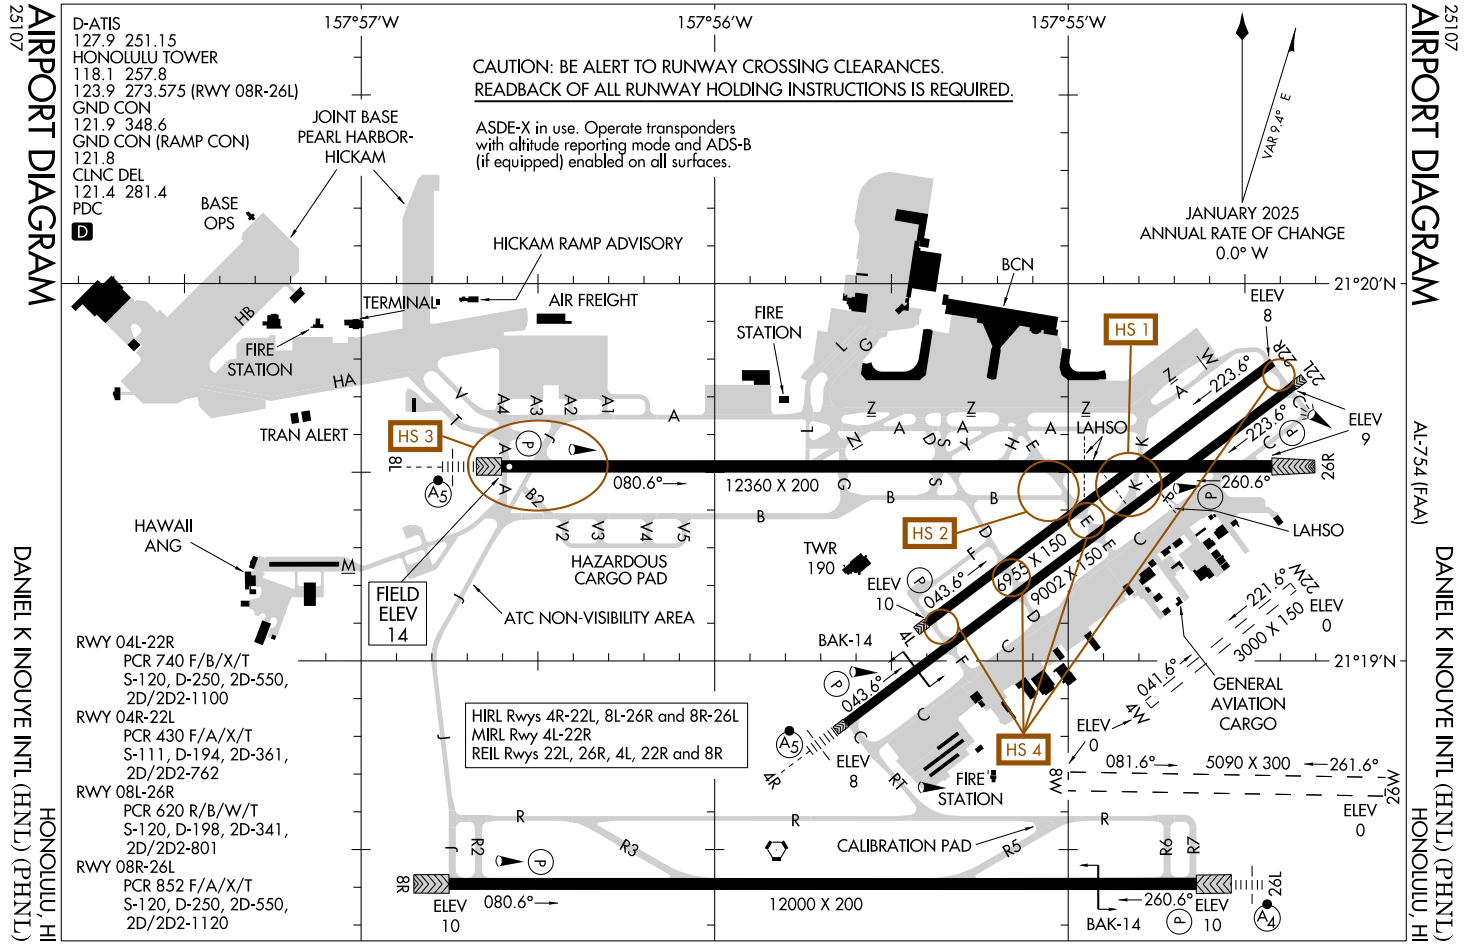
AIRPORT DIAGRAM
25107
DANIEL K INOUYE INTL (HNL) (PHNL)
HONOLULU, HI
AL-754 (FAA)
D-ATIS
127.9 251.15
HONOLULU TOWER
118.1 257.8
123.9 273.575 (RWY 08R-26L)
GND CON
121.9 348.6
GND CON (RAMP CON)
121.8
CLNC DEL
121.4 281.4
PDC
D
157°57'W
157°56'W
157°55'W
21°20'N
21°19'N
CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.
ASDE-X in use. Operate transponders with altitude reporting mode and ADS-B (if equipped) enabled on all surfaces.
VAR 9.4° E
JANUARY 2025
ANNUAL RATE OF CHANGE
0.0° W
JOINT BASE PEARL HARBOR-HICKAM
BASE OPS
HICKAM RAMP ADVISORY
TERMINAL
AIR FREIGHT
FIRE STATION
TRAN ALERT
HAWAII ANG
FIELD ELEV 14
ATC NON-VISIBILITY AREA
HAZARDOUS CARGO PAD
BCN
LAHSO
TWR 190
ELEV 10
BAK-14
GENERAL AVIATION CARGO
CALIBRATION PAD
HS 1
HS 2
HS 3
HS 4
080.6°
260.6°
043.6°
223.6°
221.6°
041.6°
081.6°
12360 X 200
9002 X 150
6953 X 150
3000 X 150
5090 X 300
12000 X 200
RWY 04L-22R
PCR 740 F/B/X/T
S-120, D-250, 2D-550, 2D/2D2-1100
RWY 04R-22L
PCR 430 F/A/X/T
S-111, D-194, 2D-361, 2D/2D2-762
RWY 08L-26R
PCR 620 R/B/W/T
S-120, D-198, 2D-341, 2D/2D2-801
RWY 08R-26L
PCR 852 F/A/X/T
S-120, D-250, 2D-550, 2D/2D2-1120
HIRL Rwys 4R-22L, 8L-26R and 8R-26L
MIRL Rwy 4L-22R
REIL Rwys 22L, 26R, 4L, 22R and 8R